



Quick Start Guide LPG4

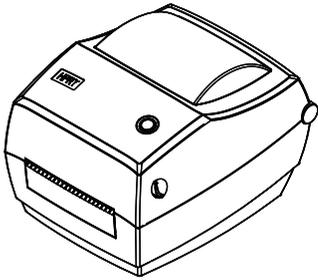

Xiamen Hanin Electronic Technology Co.Ltd.
ADD: 5F,8#,Aide Airport Industrial Park,Huli
District,Xiamen,China 361009
Tel.: +86-(0)592-5885993
Fax: +86-(0)592-5885992
Web: www.hpert.com

Packing List

Standard Accessories

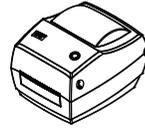

Printer



AC Adapter



Power Cord



Quick Start Guide



CD

Optional Accessories



USB Cable




Serial Cable


Note: The AC adapter and power cord vary by local or region.

Appearances and Components


Front

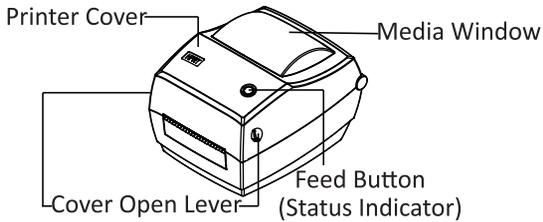

Rear

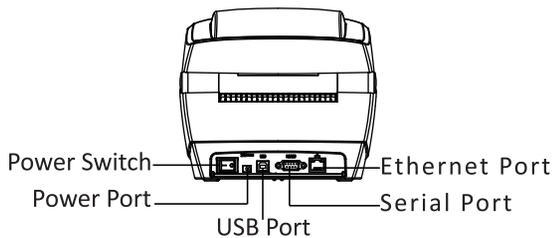


Inside

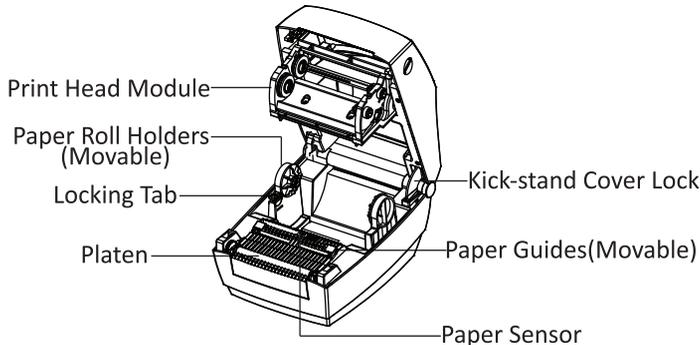


Note: Views above are for reference only, ports differ by your choice.

Paper Loading


1. Press the left and right cover open lever with both hands simultaneously and lift the printer cover.

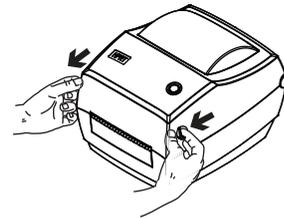


2. Slide the paper holders to adjust the distance between them, and place the roll between the holders.

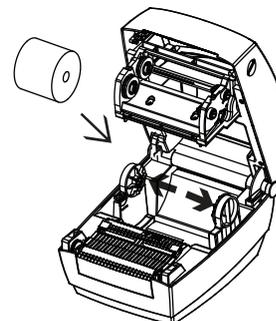


3. Make sure the holders are snug against the sides of the media roll, and then press the locking tab down to lock the media holders in place.

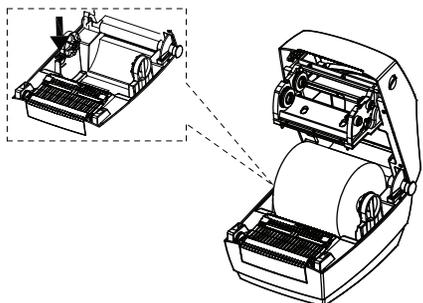

4. Pull some paper and pass the paper through paper guides, adjust paper guides according to the paper width. Hold the printer cover while press the kick-stand cover lock leftwards.

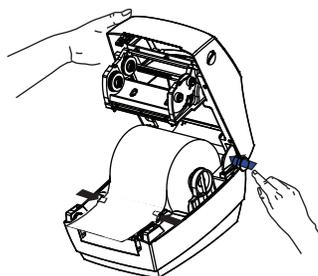


5. Lower the top cover, press down until the cover snap close, tear the extra paper in the direction of printer.

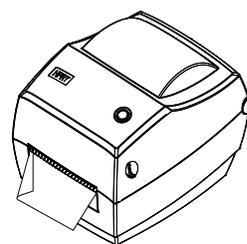

Power Connection


1. Make sure the printer is "Off".
2. Connect the AC adapter with power interface.
3. Connect the AC adapter with power cord.
4. Plug the other side of power cord into the socket outlet.

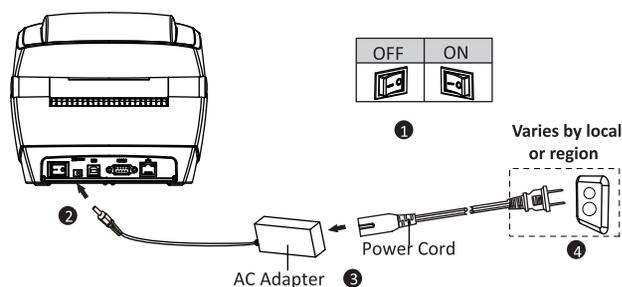


Note: Windows Driver installation please see LPG4 User Manual.

Ribbon Loading


1. Open the printer cover, the print head module will automatically open.

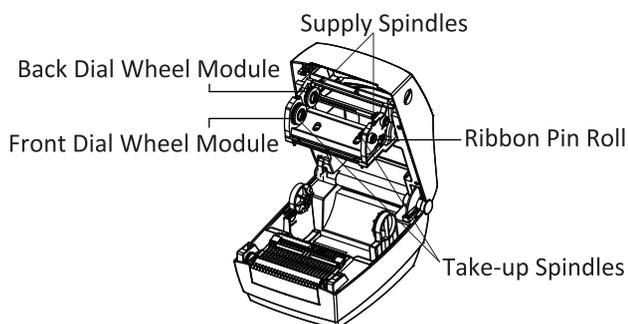

2. Put the take-up spindle core across the print head module from top to bottom, put the supply spindle core into supply spindles, right locked to ribbon pin roll, left locked to back dial wheel module. Same way to install take-up spindle core.

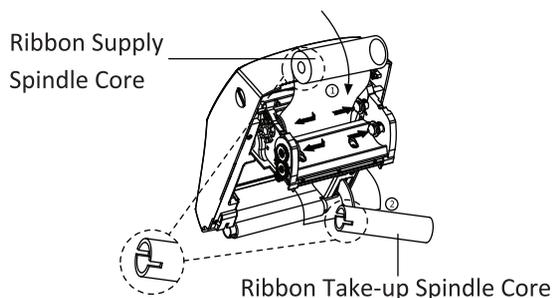

3. Pull some ribbon out, pass through print head. Stick the the ribbon to the bare core. Use the adhesive strip on new rolls; otherwise, use tape.

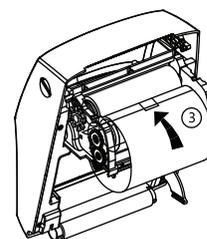

4. Turn the ribbon take-up gear counter-clockwise to remove slack from the ribbon.
5. Close the printer cover and the print head module will automatically fold up.

